 
 


Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



V. Trouble shooting

Error Codes	Potential Reasons	Solution
E01	The temperature of the appliance is too high	Unplug the appliance, remove the cookware, wait until the appliance completely cools down.
	Cooling fan defective	Contact the supplier.
E02	The temperature of the cookware is too high. Possibly, the cookware becomes empty, and appliances will shut down for protection.	Unplug the appliance, remove the cookware, wait until the appliance is completely cool down.
E03	Voltage underloaded/over-loaded	Make sure the voltage and frequency comply with the rating label shown on the product.

Disposal:



EU regulations require products to be disposed of by specialist companies who remove or recycle products, including electronic, metal and plastic components Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial equipment but may be able to offer advice on how to dispose of the equipment locally. All packaging materials should be disposed of in an environmentally friendly way. The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFC-free. Do not allow children to play with the packaging and destroy plastic bags safely.

Environmental protection:



Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).

Compliance

Parts have undergone strict product testing in order to comply with regulatory standards and specification set by international, independent, and federal authorities. Products have been approved to carry the following symbol:



Induction Cooker



MODEL : BCMIH

Please read it carefully and keep for future reference.

I. Specification

- | | |
|---------------|-------------------|
| 1). Item No.: | BCMIH |
| 2). Power: | 500 - 3000W |
| 3). Voltage: | 220-240V~ 50-60Hz |

II. Cleaning (after each use)

- 1) Disconnect the unit from the power supply and allow to cool
- 2) Wipe down with a damp cloth with mild detergent, remove any debris with a clean damp cloth and dry
- 3) Vacuum the air intake grills at the rear and underneath the unit
- 4) do not run water over the unit or use benzine, thinners, polishing powder to clean the induction cooker.

III. Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate since they can get hot.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off to avoid the possibility of electric shock and then take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unit near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.



- 19) CAUTION: Hot surface.

20) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

21) The temperature of accessible surfaces may be high when the appliance is operating.

22) Aluminium foil and plastic vessels not placed on hot surfaces.

23) the glass-ceramic surfaces are not to be used for storage.

24) metallic objects such as kitchen utensils, cutlery etc. shall not be placed on the hob surface within the

cooking zones since they could get hot;

25) take care when operating the appliance, as rings, watches and similar objects worn by the user could get hot when in close proximity to the hob surface

26) only use vessels of the type and size recommended.

27) After use, switch the hob element off by means of its control. Do not rely on the pan detector.

28) appliance not to be cleaned with water jet;

29) any repairs shall be carried out only by people trained or recommended by the manufacturer.

30) care be taken to ensure that the splash back and surrounding area free of metallic surfaces



- 31) non-ionizing electromagnetic radiation

32) Appliance is not intended to be operated by means of an external timer or separate remote-control system. DO NOT use extension leads.

Warning: Children should be supervised to ensure that they do not play with the appliance. Seek medical advice before use if fitted with a pacemaker or similar medical device.

IV. How to Use

- 1) Please put suitable cookware at the center of the heating surface of the appliance, and connect the plug to suitable socket. Please do not place empty cookware as this may damage the cookware.
- 2) Switch ON the appliance by turning the knob in clockwise direction.
- 3) "ON" will be shown instantly on the display.
- 4) Next, choose the power level by turning the knob clockwise. Minimal setting is 500W which increases in steps of 100W to maximum setting of 3000W.
- 5) Now, the appliance starts heating operation. The set power will be shown on the display during cooking.
- 6) After cooking has finished, you can turn off the appliance at any time by turning the knob anticlockwise. "OFF" will be shown on the display for few seconds and then go off.

Note:

- 1) After an extended period of operation, it is normal for the cooking fan inside to continue running in OFF mode for some time. Before unplugging the appliance, wait until the cooling fan stops running.
- 2) The appliance's surface is still hot even after switching to OFF mode. Please wait for the appliance to completely cool down before touching or cleaning.
- 3) If no cookware is placed on the heating surface after switching ON, it will turn to OFF mode automatically within 1 min.
- 4) If no button on the control panel is pressed during operation for 2 hours, the appliance will switch to OFF mode automatically.
- 5) If the appliance beeps after being switched on, the pan you are using is not suitable for induction or the appliance is defective. In case of any doubt, always contact the supplier of your pan!

V. Usable and Non-usable Utensils

- a. Usable Pans