



BCM1800

Exploded parts diagram

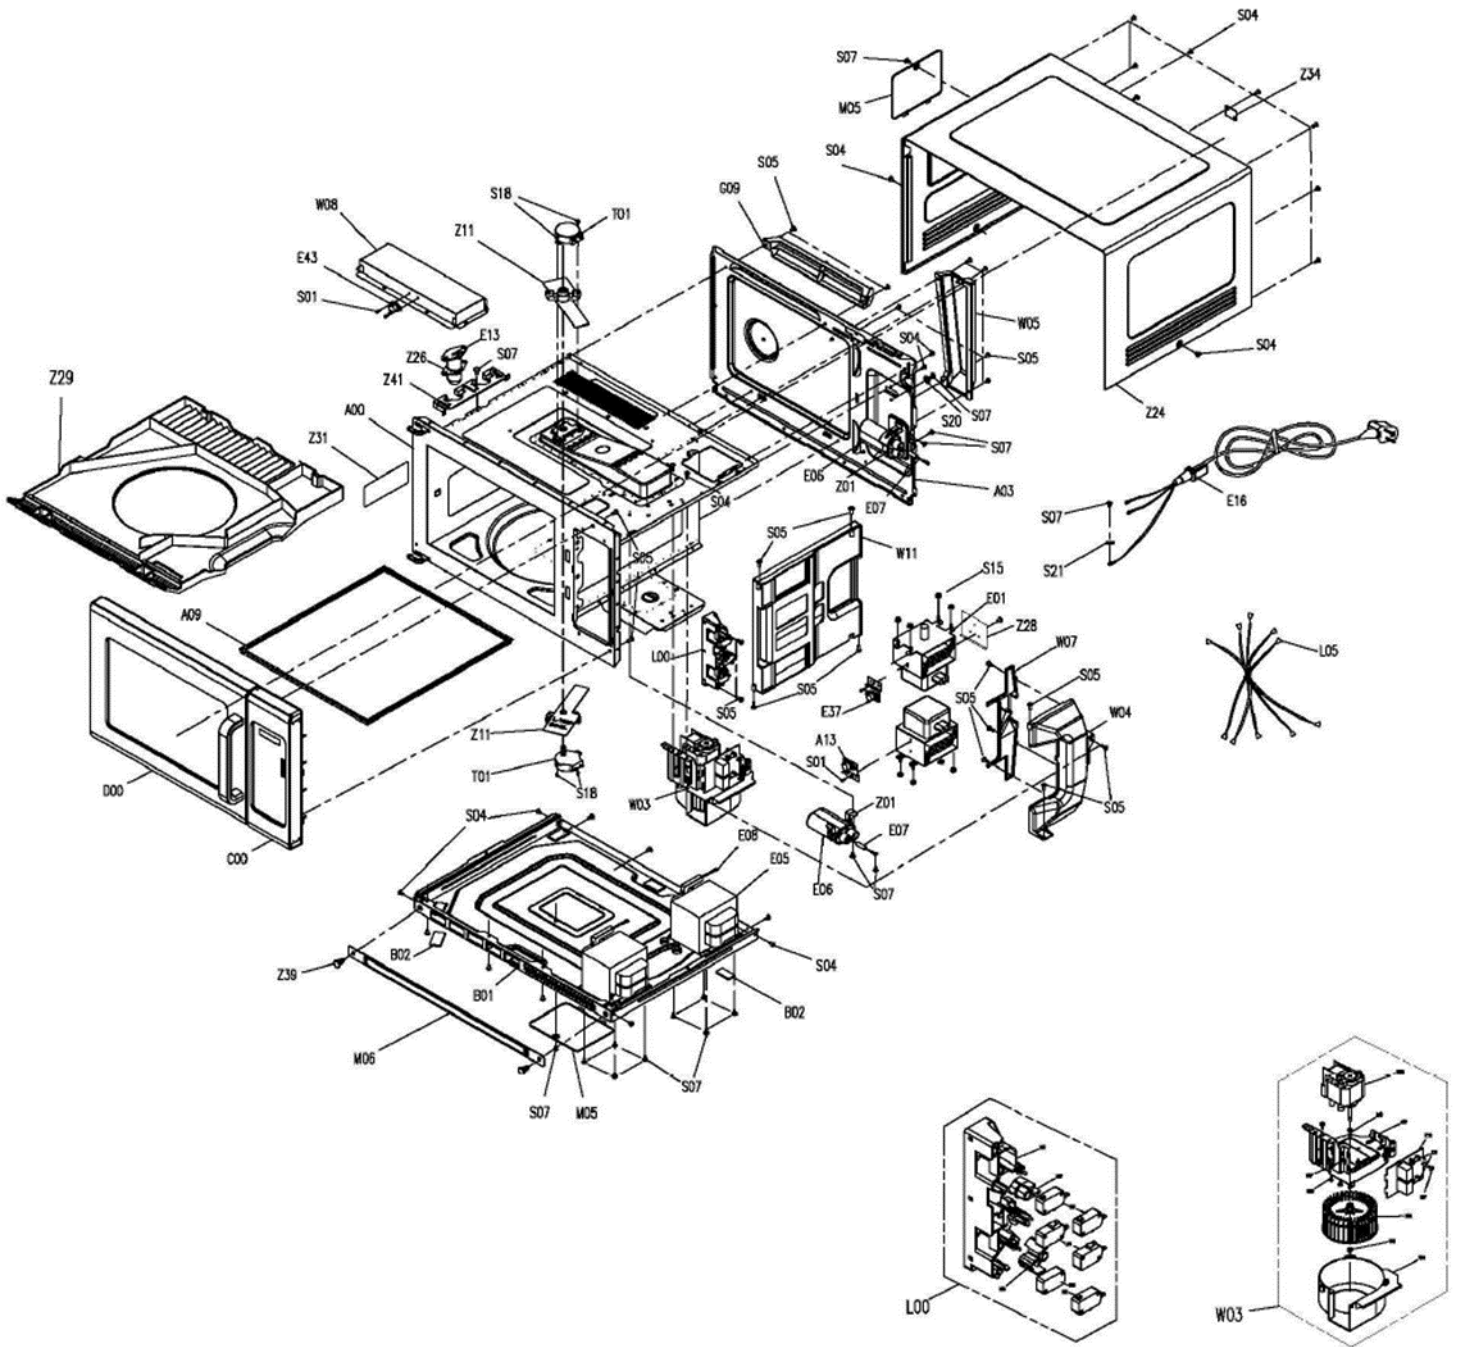

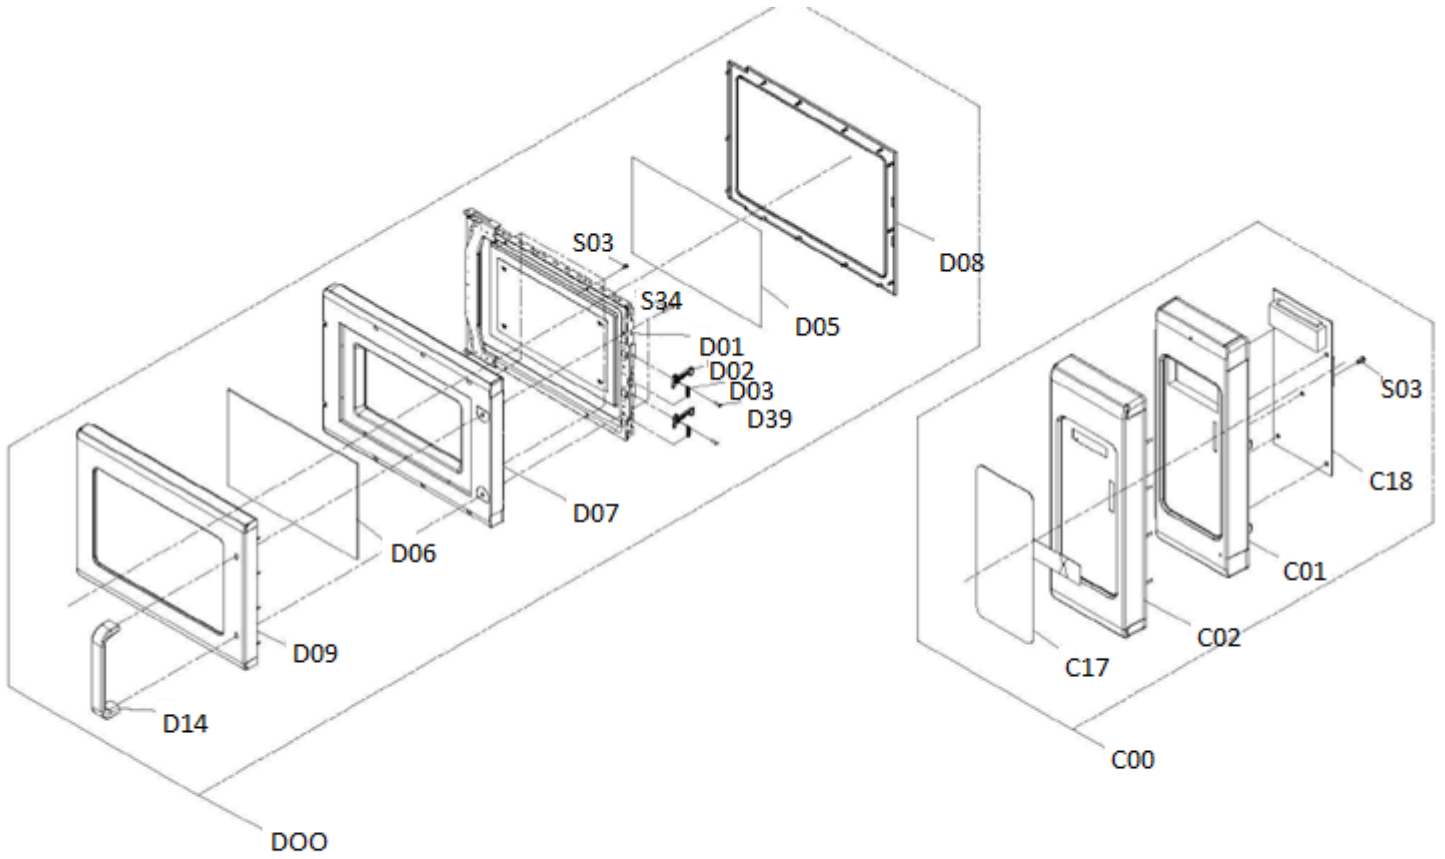





Part Number	Number	Description	Qty
B3-MW18D000	D00	Door Assy	1
***	D01	Door Frame Assy Back	1
B3-MW18D002	D02	Latch	2
B3-MW18D003	D03	Latch Spring	2
***	D07	Door Frame Assy Front	1
***	D08		
***	D09		
***	S03	Screw	9
B3-MW18D014	D14	Handle	1
B3-MW18D008	D08	Door Gasket	1
***	S34	Screw	2
B3-MW18C000	C00	Control Panel Assy	1
***	C01	Control Panel	1
***	C02	Control Panel	1
B3-MW18C017	C17	Switch Membrane	1
B3-MW18C018	C18	PCB Assy	1
***	A03	Back Plate	1
***	A07	Motor Bracket	1
B3-MW18A009	A09	Base Plate Ceramic	1
***	A13	Thermostat Bracket	2
***	B01	Base Plate	1
B3-MW18B002	B02	Foot	6
B3-MW18E001	E01	Magnetron	2
B3-MW18E005	E05	H.V Transformer	2
B3-MW18E006	E06	H.V Capacitor	2
B3-MW18E007	E07	H.V Diode	2
B3-MW18E008	E08	H.V Fuse	2
B3-MW18E010	E10	Noise Filter	1
***	E11	Fuse	2
B3-MW18E013	E13	Lamp	1
B3-MW18E037	E37	Thermostat (150/90 Deg)	2
***	E16	Power Cord	1
B3-MW18E043	E43	Thermostat (120/0Deg)	1
B3-MW18G009	G09	Upper Heat Insulator	1
B3-MW18L000	L00	Latch Bracket Assy	1
B3-MW18L003	L03	Micro Switch Interlock	4
B3-MW18L004	L04	Micro Switch Monitor	1
M3-MW18L005	L05	Wiring Loom	1
***	L07	Top Lever	1
***	L08	Bottom Lever	1
***	M05	Lamp Cover	2
B3-MW18M006	M06	Filter	1
***	S01	Screw	6
***	S04	Screw	25
***	S05	Screw	20
***	S07	Screw	18

***	S11	Torx	2
***	S15	Nut	8
***	S18	Screw	4
***	S21	Spring Washer	1
***	S23	Screw	4
B3-MW18T001	T01	Tray Motor	1
B3-MW18W001	W01	Fan Assy	1
	W02		
	W03		
***	W04	Air Guide	1
B3-MW18W005	W05	Insulator Side	1
B3-MW18W007	W07	Magnetron Cover	1
***	W08	Upper Air Guide	1
***	W11	Vent Grille	1
***	Z01	Holder H.V.C	1
B3-MW18Z011	Z11	Stirrer Fan Upper	1
B3-MW18Z011Z1	Z11	Stirrer Fan Lower	1
***	Z24	Case Outer	1
***	Z28	Air Protector	2
B3-MW18Z029	Z29	Stirrer Cover	1
B3-MW18Z031	Z31	Lamp Cover	1
***	Z34	Mounting Plate	1
***	Z38	Spacer	1
***	Z39	Plastic Fixing Pin for Stirrer	2
***	Z41	Lamp Socket Bracket	1

*** Please contact Spares for assistance***